

Technical Specification

<b>Home charger input:</b> 110/240V~50/60Hz	<b>Home charger output:</b> 21V~80V
<b>Battery:</b> 40V 4.0Ah	<b>Charge time:</b> up to 480 mins
<b>Long wand pressure:</b> up to 720 psi	<b>Short wand pressure:</b> up to 220 psi
<b>Water flow rate:</b> 2.5 to 3.0 litres per minute	<b>Max. inlet water pressure:</b> 72.5 psi
<b>Max suction height:</b> 5ft.	<b>Pressure washer gun dims:</b> 420x250x150mm

Important Safety Instructions

**WARNING:** When using this product basic precautions should always be followed, including the following:

1) Read all the instructions before using the product.

2) Do not operate this product until you have checked that all components have been assembled correctly and are firmly in place.

3) To reduce the risk of injury, close supervision is necessary when a product is used near children.

4) Keep this device out of reach of children and do not allow children to use this product.

5) Always be alert when using this product and watch what you are doing.

6) Do not operate the product when fatigued or under the influence of alcohol or drugs.

7) Ensure the area where you intend to use this product is clear of people and/or objects you do not want to get wet or damaged before operating this product.

8) Do not overreach or stand on an unstable surface or support in order to use this product. Ensure you have good footing and balance at all times in order to avoid damage or injury to you, other people or animals.

9) **WARNING** – Risk of damage or injury. Do not direct discharge stream at people, animals or other objects that can be harmed or damaged by water or a pressurised water flow.

10) Always test the effect of the pressurised water flow on a small area of the object you are about to clean or direct the water spray at, preferably out of sight, to ensure that the pressurised water flow will not cause any damage.

11) Do not spray at electrical apparatus and wiring.

12) Do not leave this device unattended with the battery pack connected.

13) Retain these instructions for future reference.

14) Failure to follow these instructions and warnings, could result in electric shock, fire or serious injury.

Disposal of Old Electrical & Electronic Equipment - applicable in the European Union.

If you see this symbol on a product or its packaging, it indicates that the product should not be treated as normal household waste. If you see this symbol on any product or packaging it should be handed over to an applicable collection point for the recycling of electrical equipment.



By ensuring that this product is disposed of correctly you will help prevent a potentially negative impact on the environment. In addition the recycling of materials will help to conserve natural resources. For further information about recycling please contact your local civic office or recycling centre.

Battery Pack General Safety Warnings

- 1) **WARNING:** Risk of fire and burns. Do not disassemble, heat above 100°C (212°F), or incinerate. Do not expose cells or batteries to heat or fire. Avoid storage in direct sunlight.
- 2) Dispose of used batteries promptly in accordance with local laws. When disposing of secondary cells or batteries, keep cells or batteries of different electrochemical systems separate from each other.
- 3) Keep batteries out of reach of children and in original packaging until ready to use.
- 4) Never put batteries in your mouth. If swallowed, contact your GP immediately.
- 5) **CAUTION** – The battery used in this device may present a risk of fire or chemical burn if mistreated. Only replace the battery with official Aguri batteries. Use of another battery may present a risk of fire or explosion.
- 6) **WARNING:** Do not use a visibly damaged battery pack or appliance as applicable.
- 7) **WARNING:** Do not modify or attempt to repair the appliance or the battery pack as applicable.
- 8) **BATTERY MUST BE RECYCLED IN ACCORDANCE WITH LOCAL LAWS.**
- 9) Do not short-circuit a cell or battery. Do not store cells or batteries haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by conductive materials.
- 10) Do not subject cells or batteries to mechanical shock.
- 11) Keep cells and batteries clean and dry. Wipe the cell or battery terminals with a clean dry cloth if they become dirty.
- 12) Do not maintain secondary cells and batteries on charge when not in use.
- 13) Retain the original cell and battery literature for future reference.
- 14) Do not use any charger other than the one specifically provided for use with the equipment. Secondary cells and batteries need to be charged before use. Always use the correct charger and refer to the manufacturer's instructions or equipment manual for proper charging instructions.
- 15) When possible, remove the battery from the equipment when not in use.
- 16) Remove the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance to prevent it from starting accidentally.
- 18) Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- 19) Any servicing or repair work should only be performed by a qualified repair person using only identical replacement parts to avoid damaging the unit or endangering yourself.
- 20) Failure to follow these instructions and warnings, could result in electric shock, fire or serious injury.
- 21) Retain these instructions for future reference.

**Troubleshooting.**  
For troubleshooting, help and advice, please visit the Support section of our website [www.aguriworld.co.uk](http://www.aguriworld.co.uk)

**Warranty**  
Your Aguri Power Clean cordless pressure washer comes with a standard 12 month warranty. To return your unit under warranty, please ship it in suitable packaging, using Royal Mail Special Delivery or an alternative insured delivery service. Please contact us before returning the unit to obtain a returns number or there may be a delay in processing your warranty claim.

**Aguri Limited**  
Unit 8 Guinness Road  
Trafford Park  
Manchester  
M17 1SD

**Please enclose the following information:**  
**(a)** Your name, address and a full description of the problem. **(b)** A telephone number where you can be reached during business hours. **(c)** A copy of your proof of purchase. **(d)** Your RTM returns number issued by a member of our customer service team.

**Please note that the warranty will be considered void if the product:-**  
✔ Has been dropped or otherwise obviously mistreated. ✔ Has been subjected to excessive heat or stored in damp or wet conditions. ✔ Has been opened or dismantled. ✔ Has been charged or powered with any cable or charger other than the one supplied.



Power Clean  
Cordless Pressure Washer

User Guide

Please read carefully before use.



What's in the box

- |                            |                              |
|----------------------------|------------------------------|
| 1. Pressure washer gun     | 6. Soap gun                  |
| 2. Long wand               | 7. Rechargeable battery pack |
| 3. Short wand              | 8. Battery charger           |
| 4. Green 25° spray head    | 9. Short hose and filter     |
| 5. Red 0° laser spray head | 10. Hard storage case        |

[www.aguriworld.co.uk](http://www.aguriworld.co.uk)



# Power Clean

## Operating instructions



01

### Charging the battery.

Connect the charger to the battery and plug the charger in to a standard 240V house socket.

It will take up to 480 mins to fully charge the battery from empty.

Press and hold the button on the front of the battery to check the level of charge remaining. All four LEDs will illuminate when the battery is fully charged.



02

### Connecting the short wand to the long wand.

For maximum pressure, the short wand should be connected to the long wand before the combined sections are attached to the main body of the pressure washer.

Insert the short wand in to the long wand. Push it firmly in and rotate clockwise in to place. Check that the two sections are fully connected before using the pressure washer.



03

### Connecting the green or red spray nozzles.

Pull the gold metal collar backwards and insert the green or red spray nozzle. The green nozzle will produce an angled spray, whereas the red nozzle will produce a single, 'laser' type spray.

Ensure that the nozzle is pushed all the way in before releasing the collar and locking the nozzle in place.

Check that the spray nozzle is fully connected before use.



04

### Connecting the wand to the main body of the pressure washer.

For maximum pressure, connect the combined, long and short wand, in to the main body of the pressure washer. Push firmly and rotate the wand clockwise in to place.

If you require less pressure, insert only the short wand and spray nozzle directly in to the main body of the pressure washer instead.

Check that the wand is fully connected before using the pressure washer.



05

### Using the soap gun.

Unscrew the top of the soap gun and fill it with a suitable liquid detergent. Align it with the main body of the pressure washer, push it firmly in and rotate clockwise to lock it into place.

Once you have connected the soap gun, follow the instructions later in this manual, explaining how to connect the hose and operate the pressure washer.

Always check that the soap gun is fully connected before use.



06

### Connecting the battery.

Slide the battery on to the handle of the gun until it 'clicks' in to place. To remove the battery, press and hold the button above the LED battery indicator and slide the battery off.



07

### Connecting a hose.

Connect the short hose and filter provided or your own hose pipe to the main body of the pressure washer. Push the female adaptor firmly on to the male receptor until you feel it 'click' in to place.



08

### Using the short hose and filter.

If you are using the short hose and filter supplied, submerge the filter end in to a bucket of water.

If the filter floats back to the top, lightly shake it while it is still submerged to release any pockets of air that are trapped in the filter.

**Please note that it may take up to 20 seconds for the water to travel the length of the hose and reach the gun after you have pulled the trigger.**



09

### Rotating the handle.

Press and hold the orange button on top of the gun while you rotate the handle to change the handle position as required.



10

### Locking and unlocking the power trigger.

Push the trigger lock from side to side to lock and unlock the power trigger as necessary.



11

### Operating the pressure washer.

Once the wand or soap gun, and the hose is fully assembled the pressure washer is ready to use.

If you have connected the washer to your own hose, ensure the hose is safely connected to the tap and turn the water on.

**(Please note that the gun will begin to emit water immediately, so ensure that the gun is not pointing at, or near anything that you do not wish to get wet)**



If you are using the short hose included with the pressure washer, ensure that the filter end is fully submerged in to whatever water source you are using.

Next, pull and hold the orange power trigger. If you are connected to a normal hose with the tap 'open' the gun will emit pressurised water almost immediately. If you are using the short hose and filter supplied, submerged in something like a bucket of water, it may take about 20 seconds for the pressurised water to reach the gun and start to flow. Press the H / L button to switch between high and low pressure as required.

Release the orange power trigger whenever you want to stop the water flow.

### Using the soap gun

If you have the soap gun attached, carefully aim the pressure washer at the object you want to cover in soap and pull the trigger. The pressure washer will automatically emit a mixture of soap and water. Use the soap gun to cover the object you want to wash, such as a bike or vehicle, then clean as normal using a suitable brush or sponge. Next, remove the soap gun from the main body of the pressure washer, re-attach the wand and rinse off the soap with clean water.

Release the orange power trigger whenever you want to stop the flow of soap and water.